
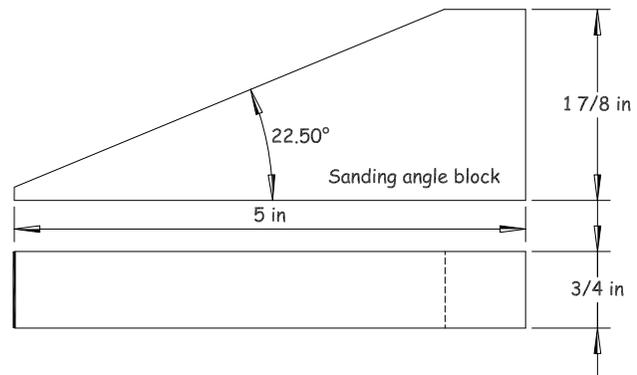
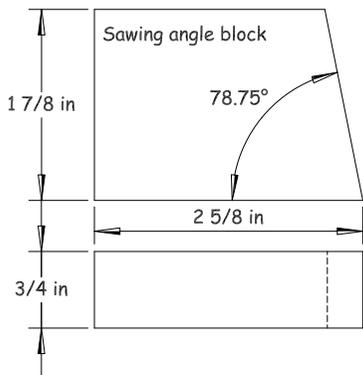
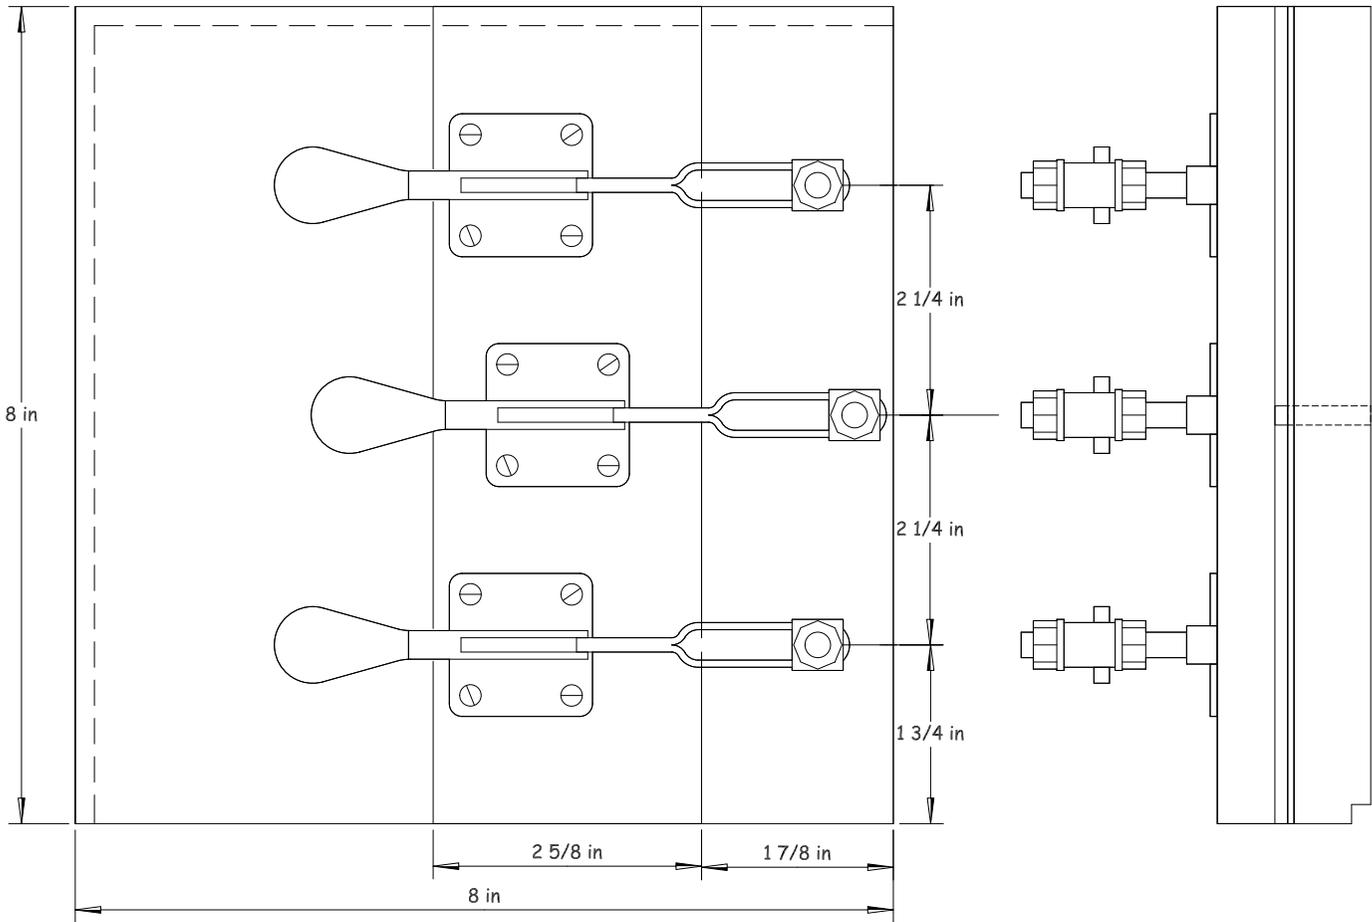


Locate clamp far enough back so it
doesn't come in contact with sanding disc

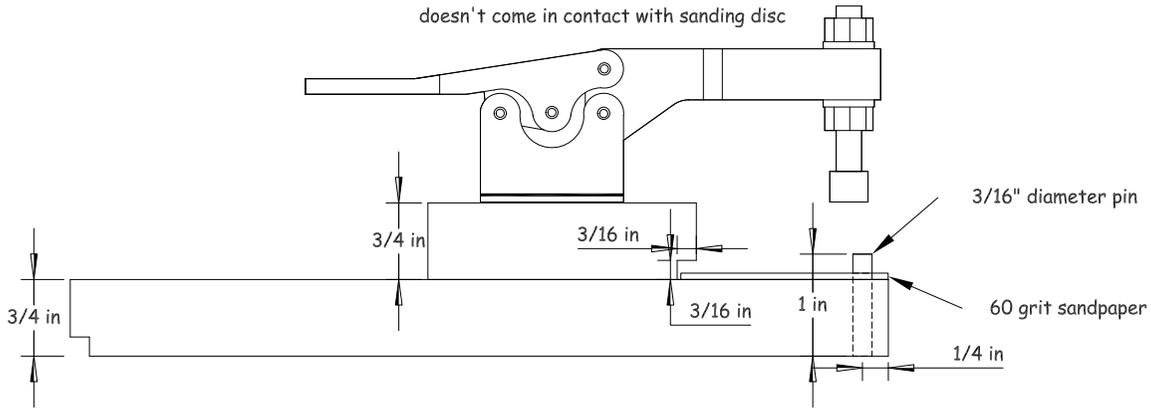

Sawing / Sanding Jig for Curved Segments
By Craig Kirks